Note: Connections to meter base and junction box must be watertight. Meter socket, junction box, and service panel to be solidly grounded together. Conductors from meter to breaker box to be of proper size to match breakers. Mininum #8.

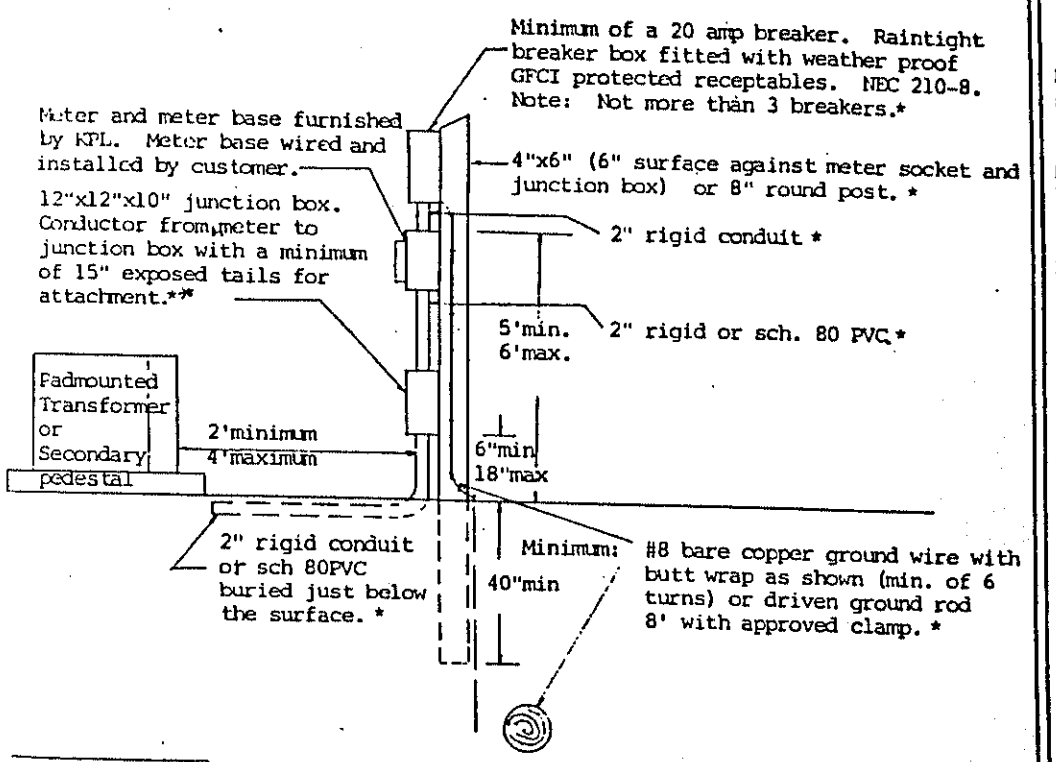

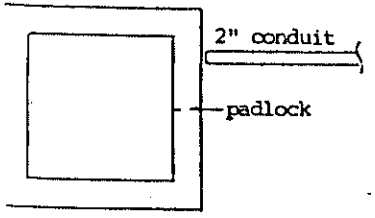

Top View

Install conduit to the right side of the padlock on the front of the pad mount transformer.

*Furnished and installed by customer.
*Junction box for KPL installations only

Must be inspected by electrical inspector (City or County)

REV	DESCRIPTION	DATE	BY
4			
3			
2			
1			

DRAWN BY	CHK BY	APPD BY	
DATE 1/10/85	SCALE None	W.O. NO	

CITY OF OLATHE

TITLE: Underground Temporary Service Standards

DWG NO

SHEET NO 1 OF 1

REV

Note: All material must be in safe operating condition with pole and brace adequately anchored before KPL will make hook-up. Must be inspected by electrical inspector, either city of county.

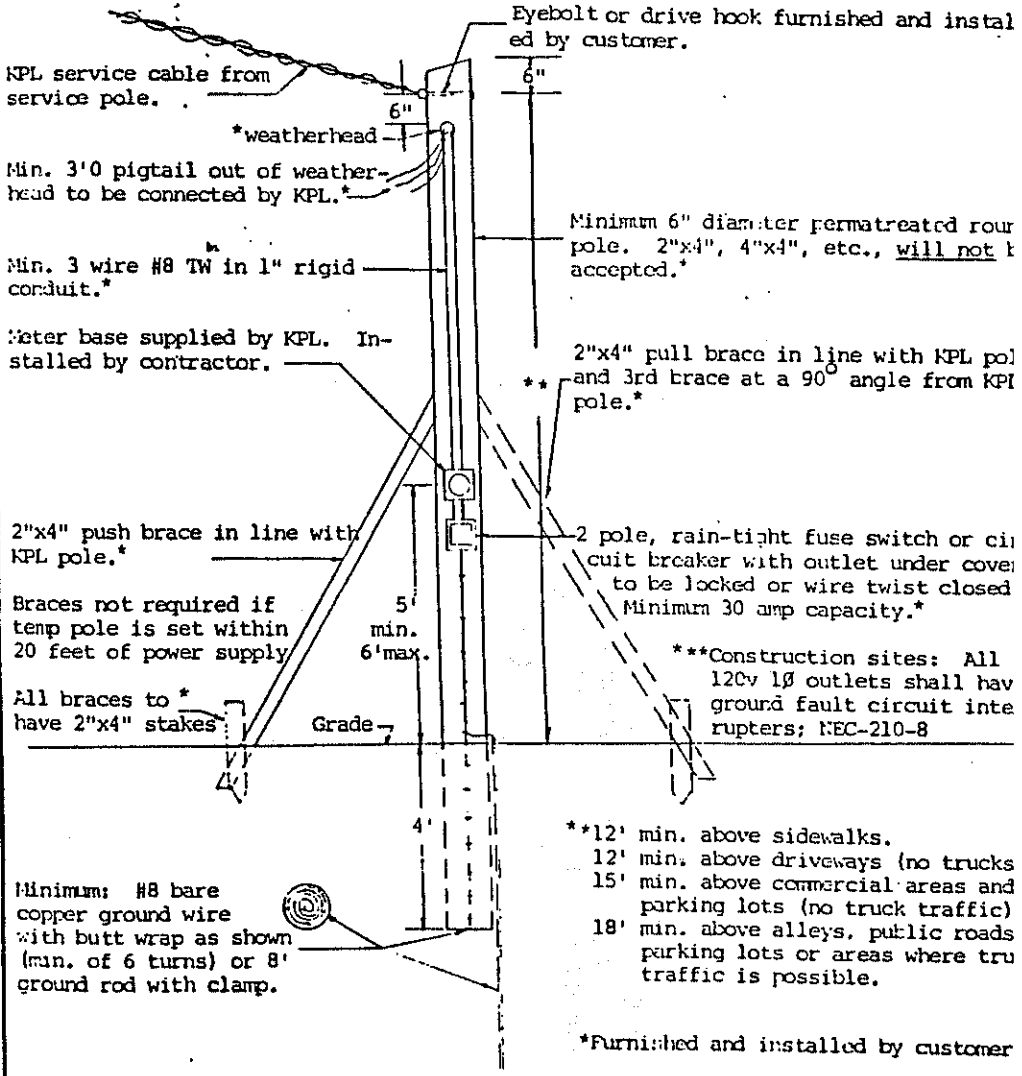

*Furnished and installed by customer

REV	DESCRIPTION	DATE	BY
4			
3			
2			
1			

DRAWN BY	CHK BY	APPD BY:	
DATE 1/9/85	SCALE None	W.O. NO	

CITY OF OLATHE

TITLE: Temporary Service Pole Standard for Overhead Installations

DWG NO

SHEET NO 1 OF 1